

Thermistor: TH (16D47).

Note: To remove bottom lid of case, remove two set screws and two self-tapping screws—A.C. jack and bottom lid of case are engaged with each other, so move jack slightly towards top of recorder during removal.